

For those of you that have forgotten or lost your code change instructions, please find below the instructions for changing a LaGard LGBasic. Please look at the front of your lock and find an LG stamped just below the keypad. If you do not find the LG this may not work.

Changing The Code On Your Electronic Lock on Your Fireproof or Burglary Safe.
ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN!

1. Enter "zero" six times
2. Enter your existing six (6) digit code two times.
3. Enter your NEW six (6) digit code two times.
4. if a mistake is made wait thirty (30) seconds and repeat steps 1-3
5. Test lock operation several times before closing the door.

*Valid Code Entry- you will hear a double signal after valid six (6) digit code is entered.

*Invalid Code Entry- Triple signal and old code is still valid.

Opening The Lock

1. Enter valid six (6) digit code (Factory is set to 1-2-3-4-5-6)
2. The lock will signal a valid code entry with a double beep
3. Within four (4) seconds, turn handle to the open position. (clockwise)
4. Pull the door open.

Wrong Try Penalty

- Entry of four (4) consecutive invalid codes starts a 5 minute delay period. (this is for anti-theft)
- LED flashed red at five second intervals
- At the end of the delay period, two more consecutive invalid codes will restart an additional five minute period.

Battery Low Warning

* Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.

* Uses one (1) 9-volt Alkaline battery. Any high quality alkaline battery will do fine.

* Change your battery at least once a year. Not only on your safe but also on all smoke detectors you may have around your home or office. (My wife says Halloween is the National Change Batteries Day and if its not...it darn well should be!)

If your battery is depleted and will not allow lock to open, simply follow instructions below. Note: A sign that the battery is low is when you put in the code and it accepts it but doesn't pull back the bolt. You have a weak battery.

Changing Your Battery

1. Remove black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on its handle. Note that sometimes there is a screw securing the battery door which must be removed first.

2. Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it does.
3. The connector is easily removed by unsnapping it from the two terminals on the top of the battery.

NEVER PULL ON BATTERY LEADS.

4. Connect a new 9-volt alkaline battery to the battery clip.
5. Push the battery and the leads completely up into the battery compartment.
6. Install the battery cover by placing one side of the cover in position and then pressing the other side into position with your finger.

If you still have problems regarding your drop safe, depository safe, fireproof safe, gun safe, floor safe, wall safe, security safe, or any other safe that you have purchased from us please call us at 877-629-6214 or contact your local locksmith.