

Digital Lock System Opening Manual



• Thank you for choosing the Digital lock system designed by BOOIL SAFES CO., LTD. In order to make the best use of this digital lock, please observe the following instruct.

TO OPEN SAFE

You must first install 4 quality AA batteries.

To install batteries :

Turn keypad counterclockwise and gently pull forward being careful not to damage wires. Insert 4 quality AA batteries into keypad and reinstall keypad.

How to open :


- STEP 1 : Enter starting button “*” “PASSWORD” should appear on the LCD.
- STEP 2 : Enter Personal Code given by the manufacture.
- STEP 3 : Press the button “#” for the end.
- STEP 4 : Turn the Safe Handle or Key to open the safe door.

• Notice : If you make a mistake entering the personal code, “ERROR!” will appear on the LCD. After 3 wrong attempts, “WAIT!” will appear on the LCD for 3 minutes, during which time it can not be used.

TO CHANGE THE PERSONAL CODE

(The master code could be changed with the safe door opened)
Reference : The personal code could be input from 1 digit to 8 digits.

- STEP 1 : Press “Reset” button located on inside of door.
“NEW_PW :” appears on the LCD.
- STEP 2 : Enter a New personal code.(Ex:5555)
- STEP 3 : Press “#” : “SUCCESS !” appears on the LCD

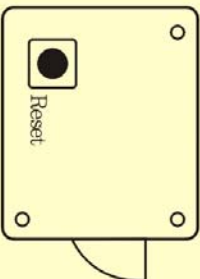

※ Just a moment !
Test your new personal code(Ex)≠5555#, “MATCH !” should appear .

CHANGE OF PERSONAL CODE ON THE CHANGING MODE

- STEP 1 Press start button “*“
- STEP 2 Press end button “#“
- STEP 3 Press master code (Ex:5555)
- STEP 4 Press “#“
- STEP 5 Change Mode “0-EXIT” will appear on the LCD
- STEP 6 Press “1”(CN:1...) at this moment. Choose one personal code by pressing the subsidiary channel “2,3,4,5” (Ex)≠#5555# → 0-EXIT.1,2(Channel) → NEW_PW:)

- STEP 7 Enter a New personal code(Ex) 7777) and then press “#” (Ex) 7777#(RENEW_PW :)
- STEP 8 Enter a New personal code again and then press “#” (Ex) 7777#)
- STEP 9 The perfect confirmation of input should appear.
(Completion : “SUCCESS !”, Failure : “ERROR !”)
- STEP 10 Try from STEP 1 again, if failure.

FUNCTION MODE

Repeating numbers should appear on the LCD as below when you press “#” on the “0-EXIT” of “Changing Mode”.

0 - EXIT (Changing Mode)
The customer's personal codes from channel 1 to 5 are available.

- 1 - DELETE PASSWORD
• Channel 1 Master code can not be deleted only changed.
• Channel 2 to 5 can be deleted.

To Delete password :


- STEP 1 : Press “2” on changing mode(CN : 2,3,4,5)
- STEP 2 : Press the channel you want to delete (1=Y / 0=NO)
- STEP 3 : To delete, Press “1” (SUCCESS !)
To cancel, Press “0”

7-DISPLAY MODE (The function of Hiding Personal Code)

- To Hide
Press “7” at the 0-EXIT(DSP HIDE) EX) 5 5 5 5 → * * * * *
- To Cancel
Press “7” again at the 0-EXIT(DSP MODE) EX) * * * * → 5 5 5 5

8-VIEWLOG(The function for identifying the button user)

Press “8” at the 0-EXIT

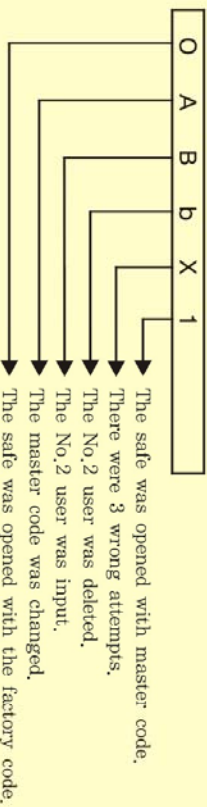

※ You are able to identify the status used it more than five times when you press “#”.
You will return to change mode when you press “0”

The method for identifying usage

- Digit - The user, who is matched with digit used safe, was opened.
- A-E - The users from 1 to 5(from A to E) was input.
- b-e - The users from 2 to 5(from b to e) was deleted.
- 0 - The safe was opened with the factory code X(English character) - There were 3 wrong attempts.

9.CLRLOG(The function for deleting the button users)

- Press “9” at the changing mode(0-EXIT) / (1=Y/0=NO)
- To delete, press “1” (SUCCESS !)
- To cancel this mode, press “0”

THE TIME FOR CHANGING BATTERY

If you have problems opening your safe the first thing you should replace the batteries. In case the safe doesn't open, even if the melody along with LED was turned on, the battery need to be replaced immediately.